


Brackets can be mounted either way round dependant on required equipment orientation.
 Both brackets must be mounted in the same orientation.
 Wall mount bracket are fitted using existing screws from rubber feet.
 Torx T10 sized screw driver is required.

These brackets are NOT to be used with any other Ampetronic equipment.

BOX OUTLINE
FOR REFERENCE

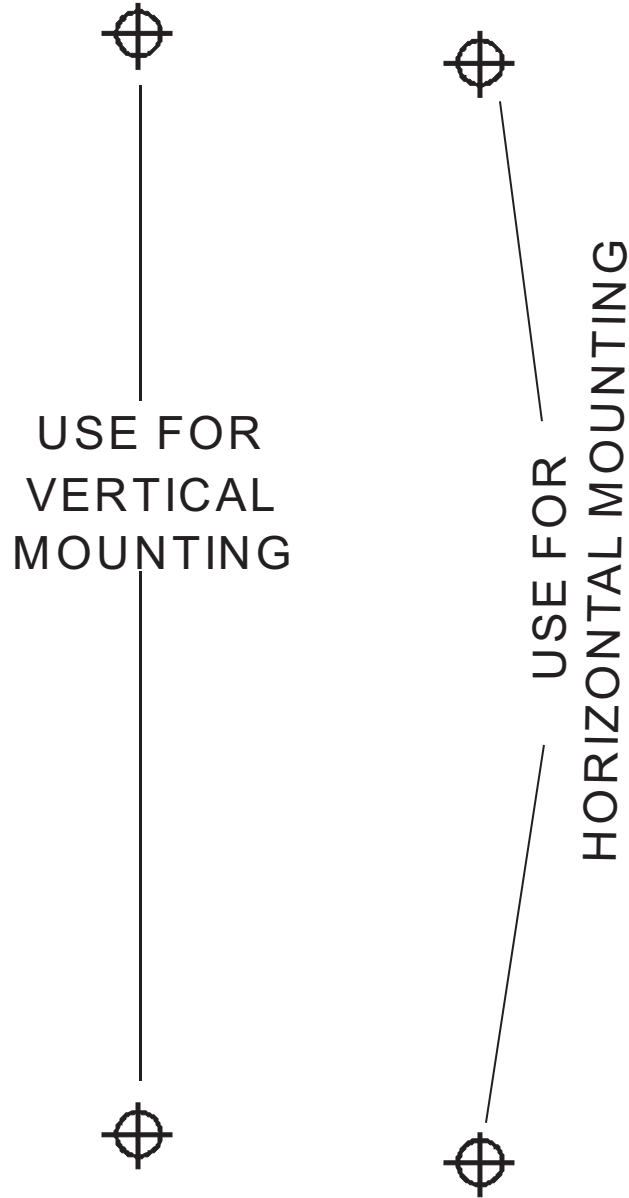

WML1U DRILLING TEMPLATE
USE No8 ROUND HEAD SCREWS

UNIT MAY BE MOUNTED
HORIZONTALLY OR VERTICALLY